



5050 Kansas Ave. Kansas City, KS 66106 816-765-1444

## Instructions - Electric Food Warmer

**WARNING** Be certain to plug the hot box directly into a wall outlet without using an extension cord and without other items plugged into the same outlet. Failure to do this will cause the hot box to function below expectation and can be dangerous.

- Turn the power switch ON; the red power light will illuminate.
- Preheat at this temperature for at least 30 minutes.
- Place food on sheet pans and place in Hot Box.
- Adjust the thermostat to your desired temperature.
- Proper food holding temperature is 140° or higher for most food.
- To shut down, turn the power switch OFF.

**Note:** To keep food from drying out, add a pan of water to the bottom of the unit.

Continually opening & closing the doors will cause temperature loss faster than the food warmer can recover.

If continually opening doors or need faster heat times, we would suggest adding sterno to boost heat.

### Cleaning

- Throw all debris away.

This document was created with Win2PDF available at <http://www.win2pdf.com>.  
The unregistered version of Win2PDF is for evaluation or non-commercial use only.  
This page will not be added after purchasing Win2PDF.