



5050 Kansas Ave. Kansas City, KS 66106 816-765-1444

Instructions – Coffee Maker

Operating Instructions

- Fill coffee pot with COLD water to desired amount. Water level marks are stamped into the side of the pot.
- Wet the filter basket and add coffee grounds (see chart below). Make sure stem is set into the center well in the pot.
- Put cover on and place pot on stable, level surface.
- Plug coffee pot into standard 110 electrical outlet with NO EXTENSION CORDS or other heating/cooking devices. (Faberware pots have no switch – Regal Ware pots do, turn it on.)
- After coffee has finished brewing (the “serve” light will go on), carefully remove hot basket. The pot’s warmer will keep the coffee hot.

Brewing Time: Approximately 1 minute per cup of coffee. (Half hour for 30 cups, one hour for 60 cups, etc.)

Coffee Chart

# of Cups	Coffee Measure
30	2 cups
42	3 cups
60	3.5 cups
100	6 cups

*1 pound of coffee is equal to 4.75 cups of ground coffee (approx).

*NEVER IMMERSSE COFFEE POT IN WATER! Simply rinse out coffee pot and basket before returning.

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.